

PITCHER RINSER CLEANING INSTRUCTIONS

The following cleaning procedure should be completed nightly at close of store. Failure to complete this cleaning procedure can result in poor operating drains. We highly suggest using the following cleaning procedure to keep your rinser in pristine condition.

You Will Need:

- 1 x Milk Frother Cleaner
- 1 x Soft cloth
- 1 x 2 liter container (wide enough to soak the Rinser Disk)

Cleaning the Rinser Tray, Rinser Disk, and Rinser Surfaces:



1. Add 50ml of Daily Milk Frother Cleaner to 1 liter of warm water.



2. Remove the rinser drain tray.



3. Remove the Rinser Disk and add the Rinser Disk to the Daily Milk Frother Cleaner solution. Allow the part to soak while cleaning the remainder of the rinser.



4. Dip a soft cloth into the diluted cleaning solution and use to wipe down the surfaces of the rinser. Remove soaking parts from cleaning solution and rinse.



Pour the remaining diluted solution into the rinser slowly and allow the solution to drain. This will clean the drain piece and drain hose. Then give the entire unit a final rinse with clean water.



Built-up solids may need mechanical/ hand agitation to remove.



Reassemble the Drain Tray and the Rinser Disk.



The rinser is now ready for the next day's operation.